



“System Operation Posting”

P/N 06-442 REV 0
OPERATING INSTRUCTIONS
Fike Protection Systems
Voice Evacuation System

These instructions must be framed and displayed next to the panel in accordance with NFPA 72, National Fire Alarm Code for Local Fire Alarm System.

PAGING

Follow these steps to manually issue a live page:

Units without Selective Paging

1. Press the microphone key and deliver your message. The On-Line LED on the paging control card will illuminate solid while the microphone is active.

Units with Selective Paging (Audio Control Cards)

1. Select the paging source by pressing either the microphone or fire-phone switch on the paging control card. The corresponding switch LED will illuminate steady to indicate the connected status of the selected paging source.
2. Select the areas (zones) you wish to address by pressing the corresponding switch on the audio control cards. The switch LED will flash until the system amplifier(s) is captured and ready to broadcast the live page; then the LED will illuminate steady.

Press the PAGE ALL switch (if provided) to issue a page to all zones.

Press the PAGE TO EVAC switch (if provided) to issue a page to all zones currently in EVAC mode.

Press the PAGE TO ALERT switch (if provided) to issue a page to all zones currently in Alert mode.

3. Press the microphone key and deliver your message. If using the firefighter's phone, simply deliver your message. The On-Line LED on the paging control card will illuminate solid while the microphone or firefighter's phone is active.
4. Press the active audio control card switch again to restore the selected amplifier(s) to automatic operation.

Units with Selective Paging (Record and Repeat)

1. Select the microphone as the paging source by pressing the microphone switch on the paging control card.
2. Select the areas (zones) you wish to address by pressing the corresponding switch on the audio control cards. Wait for the live LED to illuminate solid; then press the page switch again to initiate the Record and Repeat function. The repeat LED will flash until the system is ready for you to record your message; at which time the repeat LED will illuminate solid.
3. Press the microphone key and deliver your message. The On-Line LED on the paging control card will illuminate solid while the microphone is active. Once the microphone key is released, the custom message will be broadcast by the selected amplifiers.
4. Press the active audio control card switch again to restore the selected amplifier(s) to automatic operation.

FIREFIGHTER'S PHONE USE

Follow these steps to use the firefighter's phone:

Units with Basic Fire-Phone Operation

1. While holding the fire-phone to your mouth, speak clearly to deliver your message.

Addressable Firefighter's Phone Operation

1. Using the fire-phone card, select the fire-phone(s) that you want to connect to the phone riser by pressing the associated switch. The switches red LED will flash until the phone is connected; then it will illuminate solid.
2. While holding the fire-phone to your mouth, speak clearly to deliver your message.
3. Press the switch again to disconnect the fire-phone(s) from the phone riser.

⚠CAUTION: Remove AC and battery power before servicing equipment. AC and battery fuses must be replaced with 15A mini automotive, fast acting fuses.

In case of Trouble contact: _____ or

Phone #: _____

Customer Service Department
Fike Protection Systems
A Division of Fike Corporation
(800) 979-FIKE (3453) or
(816) 229-3405

Refer to Fike's Amplifier Card Product Manual #06-576.