



DESCRIPTION

The Main-Reserve/Reset switch is an accessory unit for use with Fike’s addressable Fire Suppression control panels. It offers a pleasing, practical method of mounting a suppression system Main-Reserve and Reset switch in a common location. The Main-Reserve switch consists of a two position switch, two normally-open contact blocks, two normally-closed contact blocks, and adhesive label. The Reset switch consists of a keyed, momentary two-position switch, normally-open contact block, and adhesive label. The switches mount to a common stainless steel faceplate.

APPLICATION

The Main-Reserve switch is required for all main-reserve fire suppression systems. Following a system discharge, emergency response personnel must restore the control unit to normal operation. The main-reserve switch can then be used to connect the “Reserve” agent supply to the control units releasing circuit, providing uninterrupted protection. The empty “Main” container(s) can then be removed for recharge. Once recharged, the “Main” container(s) can be reinstalled and the main-reserve switch can be set back to the “Main” position. The Reset switch is used to allow resetting of the control unit from a remote location. To reset the control panel, the operator must simply insert the key and turn the switch in a clockwise direction. Upon release of the key, the spring loaded switch will return to its original position.

SPECIFICATIONS

- Operating temperature: 0°C to 49°C (32°F to 120°F)
- Operating humidity: 93% RH, non-condensing
- Weight: 0.90 lb. (408 grams)
- Mounting: Four-gang masonry box (RACO 698) or equivalent with a minimum depth of 3.5 inch (89 mm)
Electrical box not included.
- For indoor use only

ORDERING INFORMATION

Part Number	Description
10-1648	Main-Reserve/Reset switch assembly
10-1424 ¹	Main-Reserve switch
10-1423 ¹	Reset switch
02-2150 ^{2,3}	Contact Block, normally open (NO)
02-2130 ²	Contact Block, normally closed (NC)
02-2140 ²	Adhesive Label, Main-Reserve
02-2141 ³	Adhesive Label, Reset
10-105	Stainless Steel Face Plate w/ mtg. screws
10-1372 ¹	Stainless Steel Faceplate
02-2316 ^{2,3}	Mounting Screws (4 required)
02-4192 ³	Key, #0

¹Included in 10-1648 switch assembly.
²Included in 10-1424 switch assembly.
³Included in 10-1423 switch assembly.

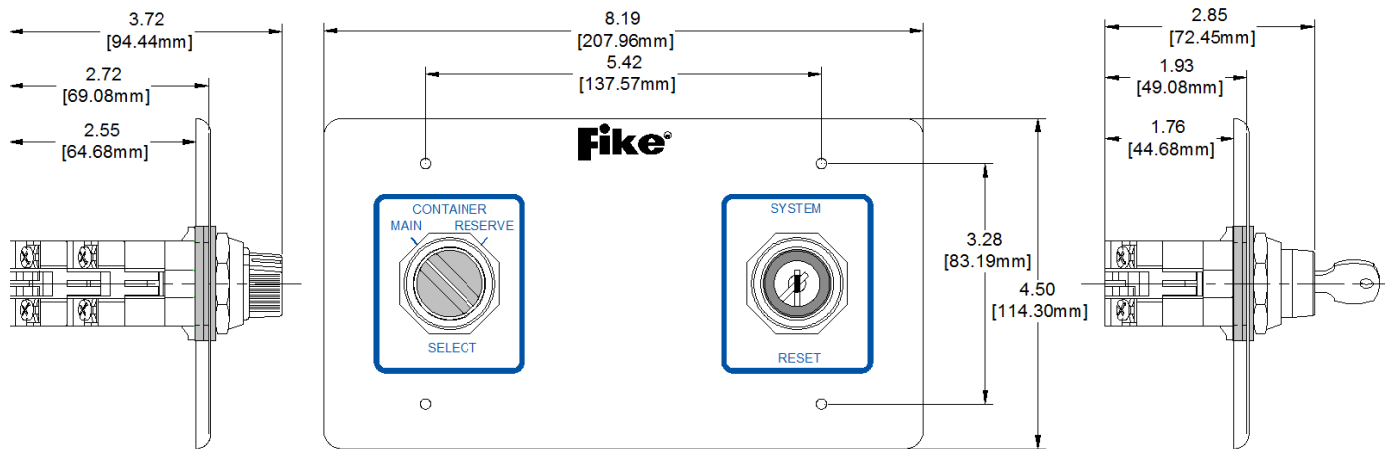


Figure 1 Switch Front and Side Views (inches/mm)

SWITCH ASSEMBLY

The switch components are shipped disassembled and must be assembled prior to installation using the following instructions.

Main-Reserve Switch

See Figure 2 for switch assembly diagram.

1. Remove protective plastic film from stainless steel face plate and apply the adhesive label, orientated as shown in Figure 1.
2. Remove locking ring bezel from switch base.
3. Remove single anti-rotation ring washer from the switch base.
4. From the backside of the face plate, insert switch base through the mounting hole provided.
5. Install anti-rotation ring washer removed in Step 3 over the switch base as it protrudes through the front side of the face plate.
6. Install and hand tighten locking ring bezel (45 in-lb.).
7. Install white insert into selector knob.
8. Install selector knob onto switch base by snapping it into place, observing proper orientation of white insert.
9. Install contact blocks to switch base.

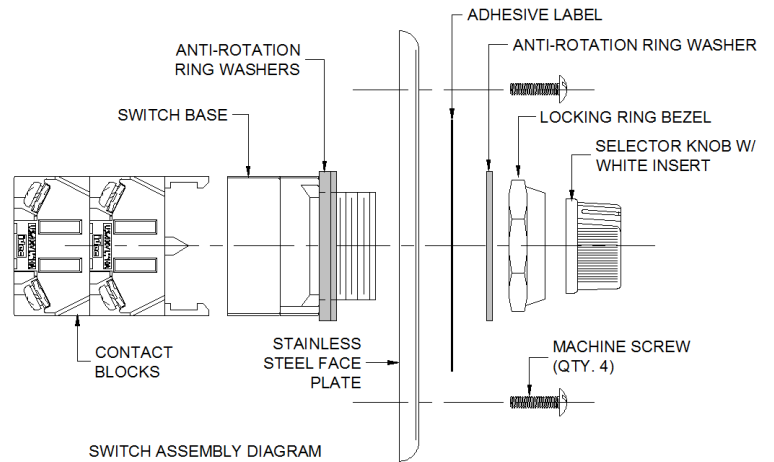


Figure 2 Main-Reserve Switch Assembly

Reset Switch

See Figure 3 for switch assembly diagram.

1. Apply adhesive label to the stainless steel face plate, orientated as shown in Figure 1.
2. Remove locking ring bezel from switch base.
3. Remove single anti-rotation ring washer from the switch base.
4. From the backside of the face plate, insert switch base through the mounting hole provided.
5. Install anti-rotation ring washer removed in Step 3 over the switch base as it protrudes through the front side of the face plate.
6. Install and hand tighten locking ring bezel (45 in-lb.).
7. Install contact blocks to switch base.

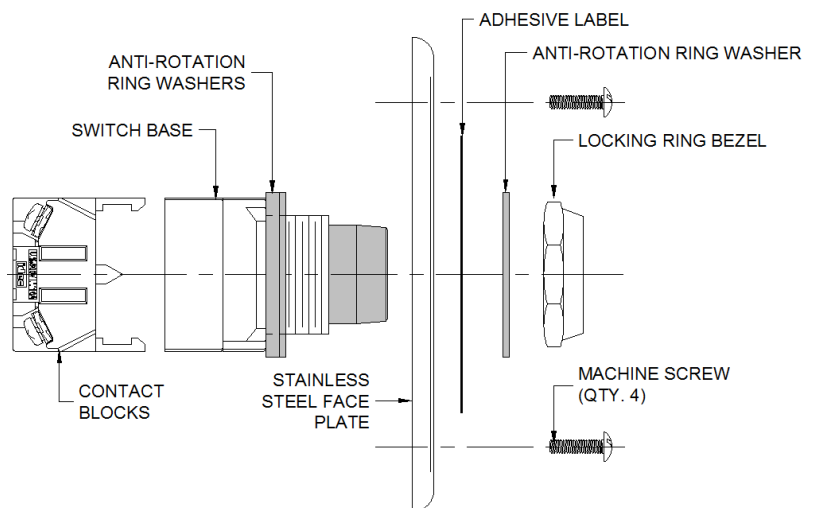


Figure 3 Reset Switch Assembly

SWITCH INSTALLATION



WARNING: *If installing the switch in an operational system: 1) Disconnect the releasing mechanism from all suppression cylinders/containers prior to installation to prevent accidental system discharge. 2) Power down the system by removing all power sources feeding the control unit (AC and DC).*

The mounting location for the switch should be free from excessive vibration, dust, and moisture.

1. Install mounting box (recess or surface mount), as shown in Figure 4.
2. Pull field wiring into mounting box.
3. Connect field wiring to contact blocks. See Figures 5 and 6 for wiring diagrams.
4. Secure stainless steel faceplate to mounting box with supplied machine screws.
5. Reapply power and test switch operation prior to reconnecting releasing mechanism to all suppression cylinders/containers.
6. Store switch keys in a secure location.


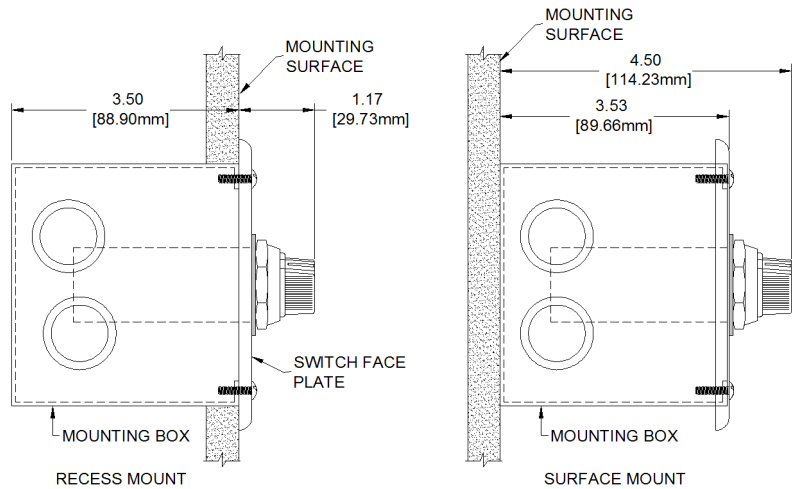



Figure 4 Mounting Options

SWITCH WIRING

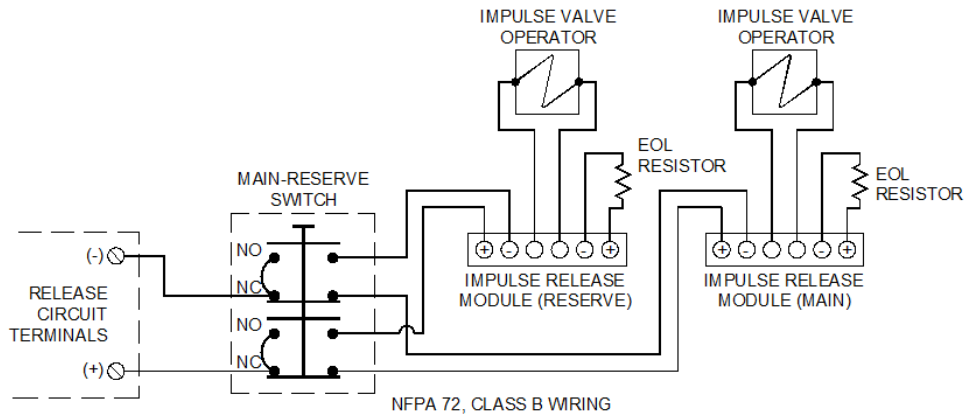

SEE CONTROL UNIT MANUAL FOR SPECIFIC WRING REQUIREMENTS.

Figure 5 Typical Main-Reserve Switch Wiring

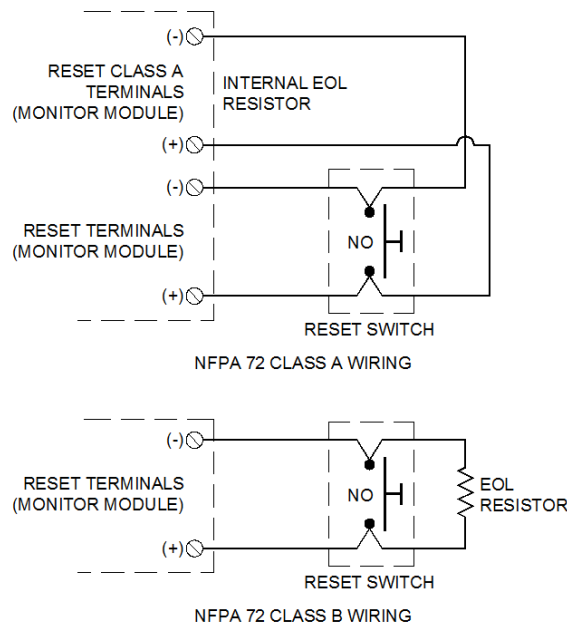

SEE CONTROL UNIT MANUAL FOR SPECIFIC WRING REQUIREMENTS.

Figure 6 Typical Reset Switch Wiring

Warranty

Fike provides a one-year limited manufacturer's warranty on this product. All warranty returns must be returned from an authorized Fike Distributor. Contact Fike's Marketing department for further warranty information.

Fike maintains a repair department that is available to repair and return existing electronic components or exchange/purchase previously repaired inventory components (advance replacement). All returns must be approved prior to return. A Material Return Authorization (MRA) number must be indicated on the box of the item being returned. Contact the appropriate Regional Sales Manager for further information regarding product return procedures.

Limitations of Liability

Installation in accordance with this document, applicable codes, and the instructions of the Authority having jurisdiction is mandatory. Fike cannot be held liable for an incidental or consequential damages arising from the loss of property or other damages or losses resulting from the used or misuse of Fike products beyond the cost of repair or replacement of any defective components. Fike reserves the right to make product improvements and change product specifications at any time.

While every precaution has been taken during the preparation of this document to ensure the accuracy of its content, Fike assumes no responsibility for errors or omissions.